IPC_G6106-B0003P65D1809

Release Notes

Zhejiang Uniview Technologies Co., Ltd

IPC_G6106-B0003P65D1809

Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for IPC_G6106-B0003P65D1809.

Acronym:

Acronym	Full Name
IPC	IP Camera

Content

1 Version Information3
1.1 Version Number ······3
1.2 Release History ······3
1.3 Version Mapping Table3
2 Feature Change Description3
3 Version Upgrade Description3
4 Version Upgrade Procedure
4.1 Upgrade Overview
4.1.1 Version Upgrade Environment······3
4.1.2 Version Upgrade Modes······4
4.2 Upgrade Procedure ······4
4.2.1 Upgrade Through the Web ······4

1 Version Information

1.1 Version Number

IPC_G6106-B0003P65D1809

1.2 Release History

Table1Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_G6106-B0003P65D1809	IPC_G6106-B0003P63D1809	2019-08-31	improved release

Table2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR	B3412P16/B5127/B3127

1.3 Version Mapping Table

Table3Product models and corresponding versions

Product Series	IPC Series	
Series	IPC6415SR	
	IPC6415SR series: IPC6415SR-X5UPW	
Target file name	IPC_G6106-B0003P65D1809.zip	

2 Feature Change Description

Improved release.

3 Version Upgrade Description

None.


4 Version Upgrade Procedure

4.1 Upgrade Overview

4.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure1Network architecture

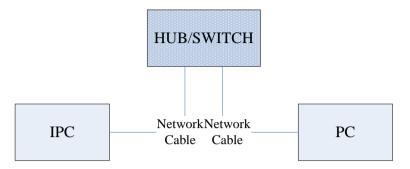

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

4.1.2 Version Upgrade Modes

You can upgrade through the Web.

4.2 Upgrade Procedure

4.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click Setup>Maintenance>Device Maintenance. The Device Maintenance page is displayed.

Firmware Upgrade			
Upgrade File		Browse	Upgrade Upgrade Boot Program
Device Restart			
Restart	Restart the device.		
🗌 Enable Auto Restart	Each Day 🗸 02:00:00 🕒	OK	
Config Management			
Default	Keep current network and user settings and restore other settings to defaults.		
Importing		Browse	Import
Exporting	C:\Users\Desktop\tftp	Browse	Export
Diagnosis Info			
Storage Path	C:\Users\MyLocalFiles\Debug\	Browse	Download

- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_G6106-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.

(5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

© 2014-2019, Zhejiang Uniview Technologies Co., Ltd.All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without priorwritten consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice.