

IPC_Q8701-B0002P68D1809

Release Notes

Zhejiang Uniview Technologies Co., Ltd

IPC_Q8701-B0002P68D1809 Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for IPC_Q8701-B0002P68D1809.

Acronym:

Acronym	Full Name
IPC	IP Camra

Content

1 Version Information.....	3
1.1 Version Number	3
1.2 Release History	3
1.3 Version Mapping Table	3
2 Feature Change Description	3
3 Version Upgrade Description	3
4 Version Upgrade Procedure	4
4.1 Upgrade Overview	4
4.1.1 Version Upgrade Environment.....	4
4.1.2 Version Upgrade Modes.....	4
4.2 Upgrade Procedure	4
4.2.1 Upgrade Through the Web	4

1 Version Information

1.1 Version Number

IPC_Q8701-B0002P68D1809

1.2 Release History

Table1Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_Q8701-B0002P68D1809	IPC_Q8701-B0002P66D1809	2019-07-30	Improved release

1.3 Version Mapping Table

Table2Version mapping table

Product Mapping Item	Version No. (For External)
NVR	B3412P16/B5127/B3127

Table3Product models table

Product Series	IPC Series
Series	IPC8542ER5
Models	IPC8542ER5 series: IPC8542ER5-DUG
Target file name	IPC_Q8701-B0002P68D1809.zip

2 Feature Change Description

Improved release.

3 Version Upgrade Description

1. Version B5010D1510 supports normal upgrade.B5010D1510 and later versions cannot be downgraded to earlier versions, e.g., B5009D1509. If version downgrade is really required, contact our customer service staff.
2. Reversion to P10D1604 or earlier is not allowed once the firmware is upgraded to P12D1611 or later. Contact our technical support if reversion is necessary in an exceptional case.


4 Version Upgrade Procedure

4.1 Upgrade Overview

4.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure 1 Network architecture

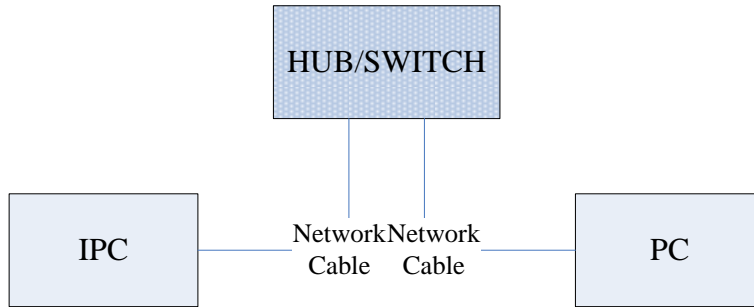

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

4.1.2 Version Upgrade Modes

You can upgrade through the Web.

4.2 Upgrade Procedure

4.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click **Setup>Maintenance>Device Maintenance**. The **Device Maintenance** page is displayed.

Firmware Upgrade

Upgrade File ☐ Upgrade Boot Program

Device Restart

Restart the device.

☐ Enable Auto Restart

Config Management

Keep current network and user settings and restore other settings to defaults.

Importing

Exporting

Diagnosis Info

Storage Path

- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_Q1201-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.

Maintenance

Firmware Upgrade

Upgrade File ☐ Upgrade Boot Program

Device Restart

Restart the device.

☐ Enable Auto Restart

Config Management

Keep current network and user settings and restore other settings to defaults.

Importing

Exporting

Diagnosis Info

Storage Path

- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.