# IPC\_G6108-B0001P73D1809

# **Release Notes**

# IPC\_G6108-B0001P73D1809

### **Release Notes**

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for IPC\_G6108-B0001P73D1809.

#### Acronym:

Acronym	Full Name
IPC	IP Camera

# Content

1 Version Information3
1.1 Version Number ······3
1.2 Release History ······3
1.3 Version Mapping Table ······3
2 Feature Change Description
3 Version Upgrade Description
4 Version Upgrade Procedure4
4.1 Upgrade Overview ······4
4.1.1 Version Upgrade Environment ······4
4.1.2 Version Upgrade Modes······5
4.2 Upgrade Procedure ······5
4.2.1 Upgrade Through the Web ······5

## 1 Version Information

#### 1.1 Version Number

IPC\_G6108-B0001P73D1809

### 1.2 Release History

#### Table1Released versions

Version No.		Basic Version No.	Released On	Remarks	
IPC_G6108-B0001P73D1809	IPC	C_G6108-B0001P71D1809	2020-10-26	Improved release	
Table2 Version mapping table					
Product Mapping Item		Version No. (For External)			
NVR		B3412P67			

### 1.3 Version Mapping Table

Table3Product models and corresponding versions

Product Series	IPC Series
Series	URDB1
Models	URDB1 series: URDB1
Target file name	IPC_G6108-B0001P73D1809.zip

# 2 Feature Change Description

P73D1809:

None

P71D1809:

None

P70D1809:

None

#### P68D1809:

Item	Feature	Description
Newly added features	Strong password login	<ul> <li>IP camera requires a strong password</li> <li>1. After default password is entered at first login, a pop-up window leads the user to change the password, and only accepts a strong password.</li> <li>2. Requires the user to change password if a weak or medium password is used to login.</li> <li>3. A strong password is required when changing password.</li> <li>4. Friendly password mode is removed.</li> <li>5. A strong password shall include at least nine characters comprising all three types: digits, letters, and special characters. Both uppercase and lowercase letters are supported.</li> <li>6. The default password changes to 123456 (admin was supported previously).</li> </ul>
Improved features	None	None
Deleted features	None	None

# 3 Version Upgrade Description

None.

# 4 Version Upgrade Procedure

### 4.1 Upgrade Overview

#### 4.1.1 Version Upgrade Environment

#### 1. Network Architecture for Upgrade

Figure1Network architecture



As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

#### 4.1.2 Version Upgrade Modes

You can upgrade through the Web.

### 4.2 Upgrade Procedure

#### 4.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as admin (default password: 123456).
- (2) Click Setup>Maintenance>Device Maintenance. The Device Maintenance page is displayed.

Firmware Upgrade			
Upgrade File		Browse	Upgrade Upgrade Boot Program
Device Restart			
Restart	Restart the device.		
🗌 Enable Auto Restart	Each Day 02:00:00	ОК	
Config Management			
Default	Keep current network and user settings and restore other settings to defaults.		
Importing		Browse	Import
Exporting	C:\Users\Desktop\tftp	Browse	Export
Diagnosis Info			
Storage Path	C:\Users\MyLocalFiles\Debug\	Browse	Download

- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC\_G6108-XXXXX.zip, and then click **Open.**
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

No part of this manual may be reproduced or transmitted in any form or by any means without priorwritten consent of Zhejiang Uniview Technologies Co., Ltd.

The information in this manual is subject to change without notice.