

IPC_G6108-B0001P76D1809

Release Notes

IPC_G6108-B0001P76D1809

Release Notes

Keywords: Version information, version upgrade

Abstract: This document provides detailed version information and upgrade procedure for IPC_G6108-B0001P76D1809.

Acronym:

Acronym	Full Name
IPC	IP Camera

Content

1 Version Information.....	3
1.1 Version Number.....	3
1.2 Release History	3
1.3 Version Mapping Table.....	3
2 Feature Change Description.....	3
3 Version Upgrade Description	4
4 Version Upgrade Procedure	5
4.1 Upgrade Overview.....	5
4.1.1 Version Upgrade Environment.....	5
4.1.2 Version Upgrade Modes.....	5
4.2 Upgrade Procedure	5
4.2.1 Upgrade Through the Web	5

1 Version Information

1.1 Version Number

IPC_G6108-B0001P76D1809

1.2 Release History

Table1 Released versions

Version No.	Basic Version No.	Released On	Remarks
IPC_G6108-B0001P76D1809	IPC_G6108-B0001P73D1809	2021-07-19	Improved release

Table2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR	B3419P16

1.3 Version Mapping Table

Table3 Product models and corresponding versions

Product Series	IPC Series
Series	URDB1
Models	URDB1 series: URDB1
Target file name	IPC_G6108-B0001P76D1809.zip

2 Feature Change Description

P76D1809:

None

P73D1809:

None

P71D1809:

None

P70D1809:

None

P68D1809:

Item	Feature	Description
Newly added features	Strong password login	IP camera requires a strong password 1. After default password is entered at first login, a pop-up window leads the user to change the password, and only accepts a strong password. 2. Requires the user to change password if a weak or medium password is used to login. 3. A strong password is required when changing password. 4. Friendly password mode is removed. 5. A strong password shall include at least nine characters comprising all three types: digits, letters, and special characters. Both uppercase and lowercase letters are supported. 6. The default password changes to 123456 (admin was supported previously).
Improved features	None	None
Deleted features	None	None

3 Version Upgrade Description

None.


4 Version Upgrade Procedure

4.1 Upgrade Overview

4.1.1 Version Upgrade Environment

1. Network Architecture for Upgrade

Figure 1 Network architecture

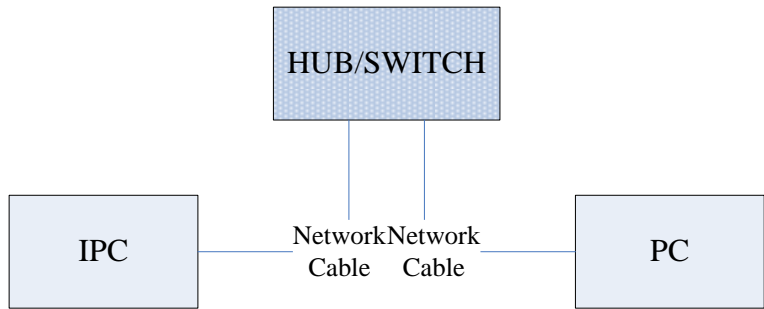

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

4.1.2 Version Upgrade Modes

You can upgrade through the Web.

4.2 Upgrade Procedure

4.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click **Setup>Maintenance>Device Maintenance**. The **Device Maintenance** page is displayed.

Firmware Upgrade	
Upgrade File	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Upgrade"/> <input type="checkbox"/> Upgrade Boot Program
Device Restart	
<input type="button" value="Restart"/>	Restart the device.
<input type="checkbox"/> Enable Auto Restart	<input type="text" value="Each Day"/> <input type="text" value="02:00:00"/> <input type="button" value="OK"/>
Config Management	
<input type="button" value="Default"/>	Keep current network and user settings and restore other settings to defaults.
Importing	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Import"/>
Exporting	<input type="text" value="C:\Users\Desktop\lftp"/> <input type="button" value="Browse..."/> <input type="button" value="Export"/>
Diagnosis Info	
Storage Path	<input type="text" value="C:\Users\MyLocalFiles\Debug\"/> <input type="button" value="Browse..."/> <input type="button" value="Download"/>

- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC_G6108-XXXXX.zip, and then click **Open**.
- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.