


Quick Installation Guide

Cloud Industrial Flat Easy Smart Switch

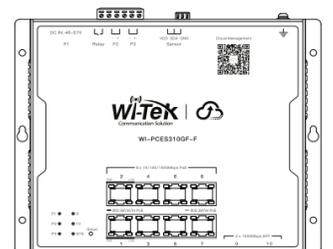

WI-PCES310GF-F
www.wireless-tek.com

1. Packing Content

- Switch x 1
- Quick Installation Guide x 1
- Temperature/Humidity Sensor x 1
- Phoenix Terminal x 2
- DIN-Rail Mounted Accessory (screw x 2, rail bracket x 1)
- Magnetic Accessory x 1

2. Appearance Overview

- WI-PCES310GF-F
- Front Panel
 - LED Indicators
 - 2*10/100/1000Mbps PoE++ Ports
 - 6*10/100/1000Mbps PoE+ Ports
- Bottom Panel
 - 2*1000Mbps SFP Slots

3. Installation

- Top Panel
 - Grounding
 - Sensor Input
 - P3 DC 48-57V Input
 - P2 DC 48-57V Input
 - Relay
 - P1 DC 48-57V Input
- LED Indicator and Button

LED Indicator&Button	Description
SYS	Blinking:The system is working normally Off:The system is being started or abnormal
P1/P2/P3	On: The device power on is normal Off: The device is power off or failed
Link	On: Port connected Off: Port disconnected Blinking: Data transmission
PoE	On: There is a PoE PD connected to be port, which supply power successfully Off: No PoE powered device (PD) connected
SFP Indicator(9, 10)	On: Port connected Off: Port disconnected Blinking: Data transmission
Reset	Hold for >5 sec. to restore factory default
- Wall-mount Installation
- Magnetic-mount Installation

4. Configuration

- Log in to the switch locally

Let the Switch obtain an IP address and then check the DHCP server to see which IP address was assigned. The Switch is set to DHCP by default, so it will try to obtain an IP address automatically. If that fails, then it will use the default fallback IP address, 192.168.0.1

To log in, follow these steps:

 - Launch your web browser. Enter the corresponding IP address of the switch in the address bar.
 - The login screen will appear. The default username and password are both admin
- Cloud login switch configuration
 - Log in to the cloud management page (No account, you need to register an account to log in, The URL is <http://cloud2.wireless-tek.com>)

2. Enter the cloud binding switch

(Explain:The switch must be connected to the internet to bind successfully)

Please enter the device serial number and the last six hexes of the device MAC address to bind a device to the current group, device can be off when binding.
(Explain: The 17-digit SN code and MAC address of the switch are shown on the sticker on the back of the switch as shown in the figure below)

3. After binding, you can use the Switch in the Tunnel option in the cloud management, and then use EWEB to enter the switch.

(The EWEB tunnel can be created only when the easy smart switch is linked with the other type of Wi-Tek cloud management device, such as cloud L2, L3 management switch, gateway, wireless AP, etc.)

4. Configuration

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

* Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
* Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.

Technical Support

Company Website

Cloud Management

Wireless-Tek Technology Limited
Address: Building 3, Units 1801-1807, 1812, Huaqiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com