


TRB255






HARDWARE


FRONT VIEW

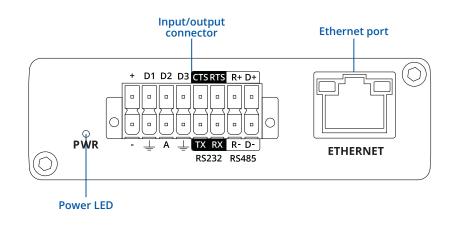

BACK VIEW

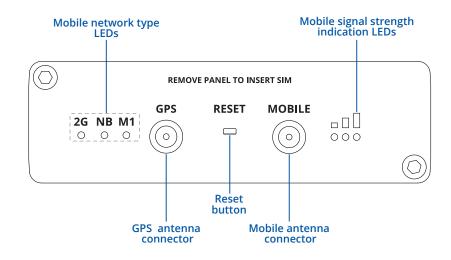

INPUT/OUTPUT 16 PIN CONNECTOR PINOUT

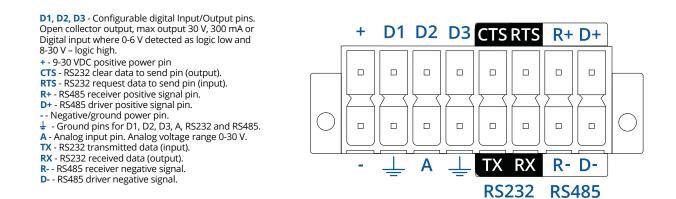



FEATURES

MOBILE

Mobile module	LTE (Cat M1) / NB-IoT / EGPRS
SIM switch	2 SIM cards, auto-switch cases: weak signal, data limit, SMS limit, on roaming, no network, network denied, data connection fai
Status	Signal strength, Connected band, SINR, RSRP, RSRQ, Bytes sent/received
Bridge	Direct connection (bridge) between mobile ISP and device on LAN
SMS	SMS status, SMS configuration, send/read SMS via HTTP POST/GET, EMAIL to SMS (planned), SMS to EMAIL (planned), SMS to HTTP (planned), SMS to SMS (planned), scheduled SMS (planned), SMS autoreply (planned)
Black/White list (planned)	Operator black/white list
Multiple PDN (planned)	Possibility to use different PDNs for multiple network access and services
Band management	Used band status display, Band lock (planned)
APN	Auto APN

ETHERNET

LAN

1 x LAN port 10/100 Mbps, comply IEEE 802.3, IEEE 802.3u standards, supports auto MDI/MDIX

NETWORK

Routing	Static routing, Dynamic routing (BGP, OSPF v2, RIP v1/v2) (planned)
Network protocols	TCP, UDP, IPv4, IPv6, ICMP, NTP, DNS, HTTP, HTTPS, FTP, SMTP, SSL v3, TLS, ARP, PPP (planned), UPNP (planned), SSH, DHCP, Telnet, MQTT, Wake On Lan (WOL) (planned)
VoIP passthrough support (planned)	H.323 and SIP-alg protocol NAT helpers, allowing proper routing of VoIP packets
Connection monitoring	Ping Reboot, Periodic Reboot, LCP and ICMP for link inspection
Firewall	Port forward, traffic rules, custom rules
DHCP	Static and dynamic IP allocation, DHCP Relay
QoS / Smart Queue Management (SQM) (planned)	Traffic priority queuing by source/destination, service, protocol or port, WMM, 802.11e
DDNS (planned)	Supported >25 service providers, others can be configured manually
SSHFS (planned)	Possibility to mount remote file system via SSH protocol

SECURITY

Authentication	Pre-shared key, digital certificates, X.509 certificates
Firewall	Pre-configured firewall rules can be enabled via WebUI, unlimited firewall configuration via CLI; DMZ; NAT; NAT-T
Attack prevention (planned)	DDOS prevention (SYN flood protection, SSH attack prevention, HTTP/HTTPS attack prevention), port scan prevention (SYN-FIN, SYN-RST, X-mas, NULL flags, FIN scan attacks)
VLAN (planned)	Tag based VLAN separation
Mobile quota control	Custom data limits for both SIM cards
WEB filter (planned)	Blacklist for blocking out unwanted websites, Whitelist for specifying allowed sites only
Access control	Flexible access control of TCP, UDP, ICMP packets, MAC address filter

VPN

OpenVPN	Multiple clients and server can be running simultaneously, 12 encryption methods
OpenVPN Encryption	DES-CBC, RC2-CBC, DES-EDE-CBC, DES-EDE3-CBC, DESX-CBC, BF-CBC, RC2-40-CBC, CAST5-CBC, RC2-64-CBC, AES-128-CBC, AES-192-CBC, AES-256-CBC
IPSec	IKEv1, IKEv2, with 5 encryption methods (DES, 3DES, AES128, AES192, AES256)
PPTP, L2TP	Client/Server services can run simultaneously
DMVPN (planned)	Method of building scalable IPsec VPNs
GRE (planned)	GRE tunnel



SERIAL COMMMUNICATION MODES

Modes

Console, OverIP, Modem (planned), Modbus RTU master, Modbus gateway, NTRIP client (planned)

MODBUS TCP SLAVE

ID filtering	Respond to one ID in range [1;255] or any
Allow remote access	Allow access through WAN
Custom registers	Modbus TCP custom register block, which allows to read/write to a file inside the router, and can be used to extend Modbus TCP slave functionality

MODBUS TCP MASTER

Supported functions	01, 02, 03, 04, 05, 06, 15, 16
Supported data formats	8 bit: INT, UINT; 16 bit: INT, UINT (MSB or LSB first); 32 bit: float, INT, UINT (ABCD (big-endian), DCBA (little-endian), CDAB, BADC)

MODBUS RTU MASTER

Supported baud rates	From 300 to 3000000
Supported functions	01, 02, 03, 04, 05, 06, 15, 16
Supported data formats	8 bit: INT, UINT; 16 bit: INT, UINT (MSB or LSB first); 32 bit: float, INT, UINT (ABCD (big-endian), DCBA (little-endian), CDAB, BADC)
Number of data bits	7 or 8
Number of stop bits	1 or 2
Parity bits	None, Even, Odd
Flow control	None, RTS/CTS (only for RS232 interface), Xon/Xoff

MQTT GATEWAY

Gateway

Allows sending commands and receiving data from Modbus Master trough MQTT broker

MODBUS DATA TO SERVER

Supported functions	HTTP(S), MQTT, Azure MQTT (planned)
	in (5), mg i i, / zare mg i i (plaimed)

MONITORING & MANAGEMENT

WEB UI	HTTP/HTTPS, status, configuration, FW update, CLI, troubleshoot, event log, system log, kernel log
FOTA	Firmware update from server, automatic notification
SSH	SSH (v1, v2)
SMS	SMS status, SMS configuration, send/read SMS via HTTP POST/GET
Call (planned)	Reboot, Status, Mobile data on/off, Output on/off, answer/hang-up with a timer
TR-069 (planned)	OpenACS, EasyCwmp, ACSLite, tGem, LibreACS, GenieACS, FreeACS, LibCWMP, Friendly tech, AVSystem
MQTT (planned)	MQTT Broker, MQTT publisher
SNMP (planned)	SNMP (v1, v2, v3), SNMP Trap
JSON-RPC	Management API over HTTP/HTTPS
Modbus	Modbus TCP status/control
RMS	Teltonika Remote Management Systems (RMS)

POWER

Connector	2 pins in 16 pin industrial terminal block
Input voltage range	9 – 30 VDC, reverse polarity protection, surge protection +/-1 kV 50 μs max
Power consumption	Idle: <1.2 W, Max: <5 W



SYSTEM CHARACTERISTICS

CPU	Qualcomm QCA9531, MIPS 24kc, 650 MHz
RAM	64 MB, DDR2
Flash memory	16MB SPI Flash (4 MB available for user)

FIRMWARE / CONFIGURATION

WEB UI	Update FW from file, check FW on server, configuration profiles, configuration backup
FOTA	Update FW/configuration from server
RMS	Update FW/configuration for multiple devices
Keep settings	Update FW without losing current configuration

FIRMWARE CUSTOMIZATION

Operating system RutOS (OpenWrt based Linux OS)	
Supported languages Busybox shell, Lua, C, C++	
Development tools SDK package with build environment provided	

LOCATION TRACKING

GNSS	GPS, GLONASS, BeiDou, Galileo and QZSS	
Coordinates (planned)	GNSS coordinates via WebUI, SMS, TAVL, RMS	
NMEA	NMEA 0183	
NTRIP (planned)	NTRIP protocol (Networked Transport of RTCM via Internet Protocol)	
Server software (planned)	Supported server software TAVL, RMS	
Mobile Network Geolocating	Location without using GPS, get approximate location based on mobile tower on RMS	
Geofencing (planned)	eofencing (planned) Configurable multiple geofence zones	

INPUT/OUTPUT

Configurable I/O 3 x Configurable Inputs/Outputs. Digital input 0 - 6 V detected as logic low, 8 - 30 V detected as logic high. Open co output, max output 30 V, 300 mA		
Analog input	1 x Analog input (0 - 30 V)	
Events (planned)	SMS, Email	
Output control	HTTP POST/GET, Schedule	
I/O juggler (planned)	Allows to set certain I/O conditions to initiate event	

SERIAL

RS232Terminal block connector: TX, RX, RTS, CTSRS485Terminal block connector: D+, D-, R+, R- (2 or 4 wire interface)Supported baud ratesFrom 300 to 3000000Number of data bits7 or 8Number of stop bits1 or 2ParityNone, Even, OddFlow controlNone, RTS/CTS (only for RS232 interface), Xon/Xoff			
Supported baud rates From 300 to 3000000 Number of data bits 7 or 8 Number of stop bits 1 or 2 Parity None, Even, Odd	RS232	Terminal block connector: TX, RX, RTS, CTS	
Number of data bits 7 or 8 Number of stop bits 1 or 2 Parity None, Even, Odd	RS485	Terminal block connector: D+, D-, R+, R- (2 or 4 wire interface)	
Number of stop bits 1 or 2 Parity None, Even, Odd	Supported baud rates	From 300 to 3000000	
Parity None, Even, Odd	Number of data bits	7 or 8	
	Number of stop bits	1 or 2	
Flow control None, RTS/CTS (only for RS232 interface), Xon/Xoff	Parity	None, Even, Odd	
	Flow control	None, RTS/CTS (only for RS232 interface), Xon/Xoff	

IOT PLATFORMS

Cloud of Things (planned) Allows monitoring of: Device data, Mobile data, Network info, Availability	
ThingWorx (planned) Allows monitoring of: WAN Type, WAN IP Mobile Operator Name, Mobile Signal Strength, Mobile Network Type	
Cumulocity (planned) Allows monitoring of: Device Model, Revision and Serial Number, Mobile Cell ID, ICCID, IMEI, Connection Type, Oper Strength, WAN Type and IP	
Can send device IP, Number of bytes send/received/ 3G connection state, Network link state, IMEI, ICCID, Mod Azure IoT Hub (planned) Serial, Revision, IMSI, Sim State, PIN state, GSM signal, WCDMA RSCP, WCDMA EC/IO, LTE RSRP, LTE SINR, LTE F Operator, Operator number, Connection type, Temperature, PIN count to Azure IoT Hub server	



PHYSICAL INTERFACES (PORTS, LEDS, ANTENNAS, BUTTON, SIM)

Ethernet	1 x RJ45 port, 10/100 Mbps	
I/O's	3 x Configurable I/O, 1 x Analog input in 16 pin terminal block	
Status LEDs	3 x connection status LEDs, 3 x connection strength LEDs, 1 x power LED, 1 x Eth port status LED	
SIM	2 x SIM slots (Mini SIM – 2FF), 1.8 V/3 V, double stacked SIM tray	
Power	2 pins in 16 pin terminal block	
Antennas	1 x SMA connector for Mobile, 1 x SMA connector for GNSS	
RS232	4 pins in 16 pin terminal block (TX, RX, RTS, CTS)	
RS485	4 pins in 16 pin terminal block (D+, D-, R+, R-)	
Reset	Reboot, restore to user default (planned), restore to factory defaults	

PHYSICAL SPECIFICATION

Casing material	Aluminium housing with DIN rail mounting option	
Dimensions 74 x 83 x 25 mm (L x W x H)		
Weight	165 g	
Mounting options	DIN rail, wall mounting (additional kits needed), flat surface placement	

OPERATING ENVIRONMENT

Operating temperature	-40 C to 75 C
Operating humidity	10% to 90% non-condensing



HARDWARE INSTALLATION

1. Unscrew two back panel hex bolts and remove the back panel. 2. Insert your SIM card(s) into the SIM socket(s), which are located on the bottom side of PCB.

3. Attach the panel and tighten the hex bolts.

4. Attach the mobile antenna (max torque 0.4 N·m / 3.5 lbf·in).

- 5. Connect open PSU leads to 16 pin terminal block:
- a) red wire to top row first contact (+);
- b) black wire to bottom row first contact (-).

6. Connect the 16 pin terminal block to gateway 16 pin connector and plug other end of the power adapter into a power outlet.

LOGIN TO DEVICE

1. Power on the device and connect the Ethernet cable to your computer.

2. Allow the gateway to boot up. This might take up t

3. To enter the gateway Web interface (WebUI), type http://192.168.1.1 into the URL field of your Internet browser.

4. Use login information shown in image A when prompted for authentication.

5. After you log in, you will be prompted to change your password for security reasons. The new password must contain at least 8 characters, including at least one uppercase letter, one lowercase letter and one digit. This step is mandatory, and you will not be able to interact with the gateway WebUI until you change the password.

6. When you change the gateway password, the Configuration Wizard will start. The Configuration Wizard is a tool used to set up some of the gateway main operating parameters.

7. Go to the **Overview** page and pay attention to the **Signal Strength** indication (image B). To maximize the cellular performance try adjusting the antennas or changing the location of your device to achieve the best signal conditions.

Α.	TELTONIKA]	В.	MOBILE	. ∎ 10-65 dBm
	AUTHORIZATION REQUIRED	admin		Data connection state	Connected
	Please anter your username and password	admin01		State	Registered (home); OPERATOR; 4G (LTE)
				SIM card slot in use	Ready
		LOG IN		Bytes received/sent*	348.7 KB / 223.5 KB

TECHNICAL INFORMATION

Radio specifications				
RF technologies EGPRS, NB-IoT, LTE (Cat-M1), GNSS				
Max RF power	Max RF power 33 dBm@GSM, 23 dBm@LTE			
Bundled accessories specifications*				
Power adapter	Power adapter Input: 0.4 A@100-240 VAC, output: 9 VDC, 1 A, connected to 16 pin terminal block			
Mobile antenna	Mobile antenna 698~960 / 1710~2690 MHz, 50 Ω, VSWR < 3, gain** 3 dBi, omnidirectional, SMA male connector			
GNSS antenna	1575.42~1602 MHz, 2.2~5 VDC, VSWR < 1.5, gain** 28 dB (typ.), RHCP polarization, SMA male connector			

*Order code dependent.

**Higher gain antenna can be connected to compensate for cable attenuation when a cable is used. The user is responsible for the compliance with the legal regulations.




WHAT'S IN THE BOX?

STANDARD PACKAGE CONTAINS

- Gateway TRB255
- Euro PSU
- 1 x Mobile antenna (swivel, SMA male)
- 1x GNSS antenna (adhesive, SMA male, 3 m cable)
 16 pin terminal block

- 1 x hex key Ethernet cable (1.5 m)
- QSG (Quick Start Guide)
- Packaging box



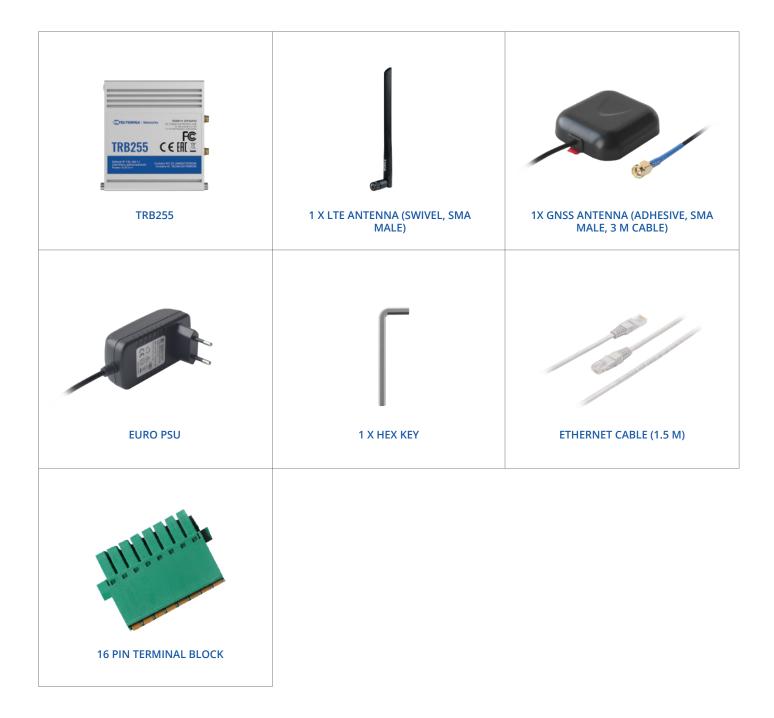



STANDARD ORDER CODES

PRODUCT CODE	HS CODE	HTS CODE	PACKAGE CONTAINS	
TRB255000000	851762	8517.62.00	Standard Package	
For more information on all availal	ble packaging options – please contac	ct us directly.		

AVAILABLE VERSIONS

PRODUCT CODE	REGION (OPERATOR)	FREQUENCY
TRB2550****	Global	 4G (LTE-FDD): B1, B2, B3, B4, B5, B8, B12, B13, B18, B19, B20, B28 4G (LTE-TDD): B39 (for Cat M1 only) 2G: B2, B3, B5, B8

The price and lead-times for region (operator) specific versions may vary. For more information please contact us.



MOUNTING OPTIONS

DIN RAIL KIT

Parameter	Value
Mounting standard	35mm DIN Rail
Material	Low carbon steel
Weight	57g
Screws included	Philips Pan Head screw #6-32×3/16, 2pcs
Dimensions	82 mm x 46 mm x 20 mm
RoHS Compliant	V

DIN RAIL KIT

- DIN Rail adapter
- Philips Pan Head screw #6-32×3/16, 2pcs for RUT2xx/RUT9xx



ORDER CODE	PRODUCT CODE	HS CODE	HTS CODE
088-00267	PR5MEC00	73269098	7326.90.98

For more information on all available packaging options - please contact us directly.

COMPACT DIN RAIL KIT

Parameter	Value
Mounting standard	35mm DIN Rail
Material	ABS + PC plastic
Weight	6.5 g
Screws included	Philips Pan Head screw #6-32×3/16, 2pcs
Dimensions	70 mm x 25 mm x 14,5 mm
RoHS Compliant	V

DIN RAIL KIT

- Compact plastic DIN Rail adapter (70x25x14,5mm)
- Philips Pan Head screw #6-32×3/16, 2pcs



ORDER CODE	PRODUCT CODE	HS CODE	HTS CODE
088-00270	PR5MEC11	73269098	7326.90.98

For more information on all available packaging options - please contact us directly.

SURFACE MOUNTING KIT

Parameter	Value
Mounting standard	Flat surface mount
Material	ABS + PC plastic
Weight	2x5 g
Screws included	Philips Pan Head screw #6-32×3/16, 2pcs
Dimensions	25 mm x 48 mm x 7.5 mm
RoHS Compliant	V



DIN RAIL KIT

- Surface mounting kit
- Philips Pan Head screw #6-32×3/16, 2pcs

ORDER CODE	PRODUCT CODE	HS CODE	HTS CODE
088-00281	PR5MEC12	73269098	7326.90.98

For more information on all available packaging options - please contact us directly.



TRB255 SPATIAL MEASUREMENTS & WEIGHT


MAIN MEASUREMENTS

H x W x D dimensions for TRB255:		
Device housing*:	74 x 83 x 25	
Box:	173 x 148 x 71	

*Housing measurements are presented without antenna connectors and screws; for measurements of other device elements look to the sections below.


TOP VIEW

The figure below depicts the measurements of TRB255 and its components as seen from the top:

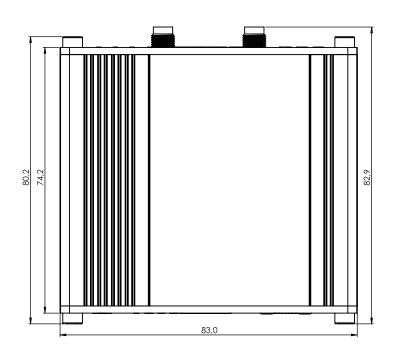

RIGHT VIEW


The figure below depicts the measurements of TRB255 and its components as seen from the right side:

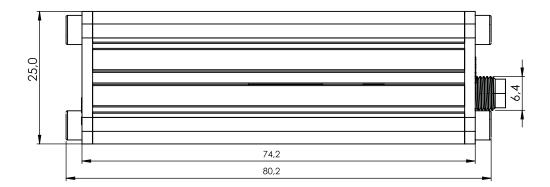




FRONT VIEW

The figure below depicts the measurements of TRB255 and its components as seen from the front panel side:

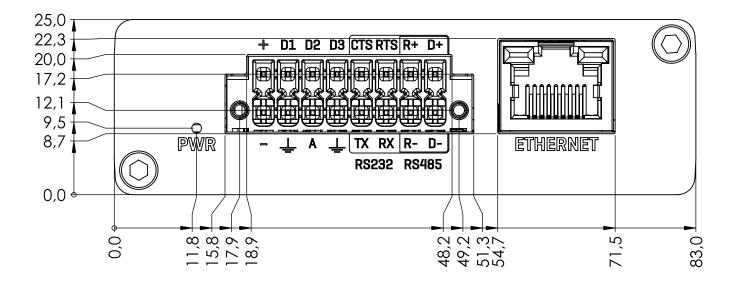

REAR VIEW


The figure below depicts the measurements of TRB255 and its components as seen from the back panel side:

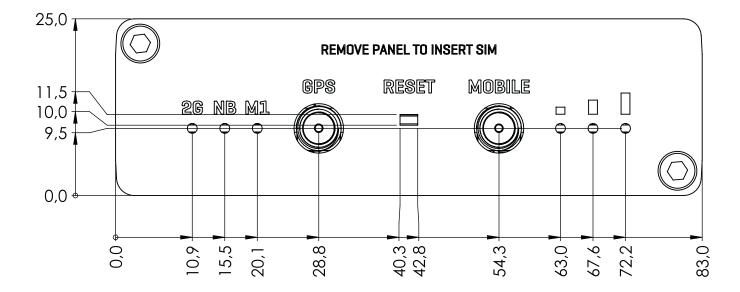



MOUNTING SPACE REQUIREMENTS

The figure below depicts an approximation of the device's dimensions when cables and antennas are attached:

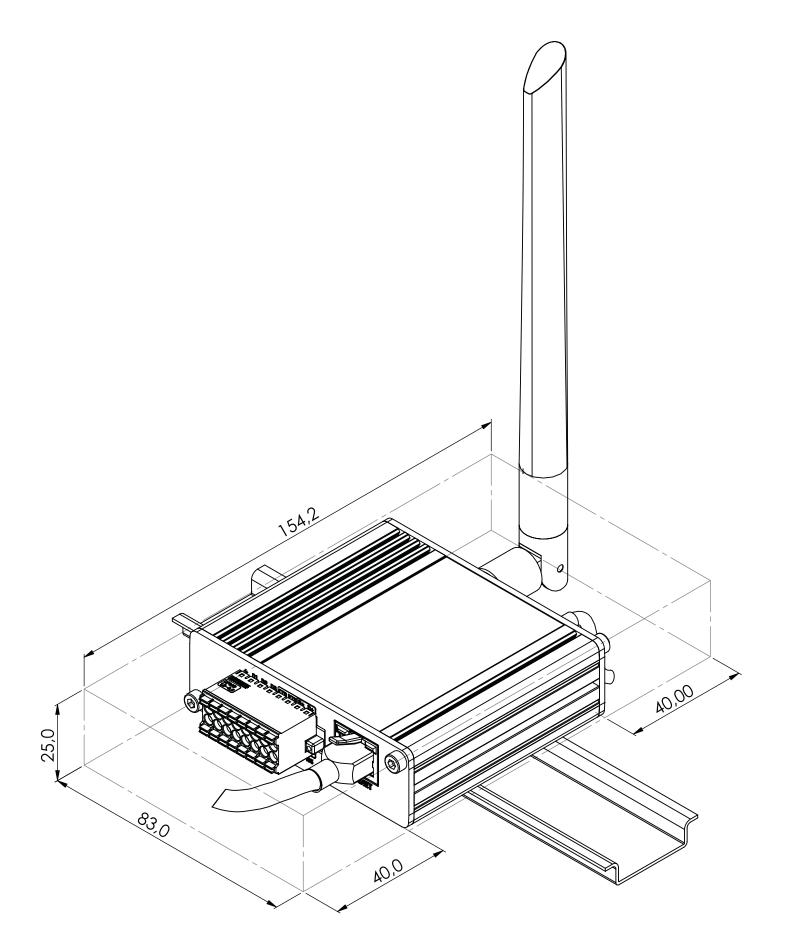



DIN RAIL

The scheme below depicts protrusion measurements of an attached DIN Rail:

