


# **RUT951**






## **HARDWARE**


#### **FRONT VIEW**

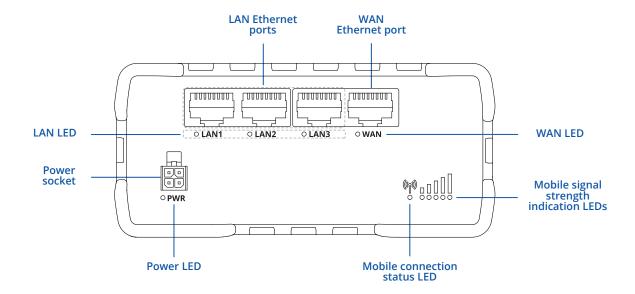

#### **BACK VIEW**

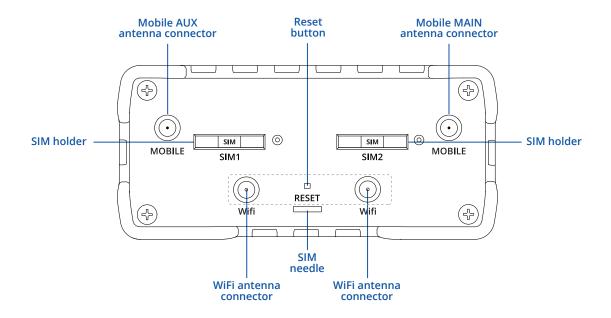

#### **POWER SOCKET PINOUT**

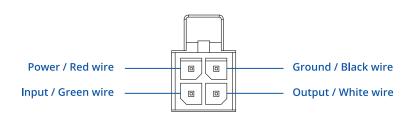



# **FEATURES**

#### **MOBILE**

Mobile module	4G (LTE) – Cat 4 up to 150 Mbps, 3G – Up to 42 Mbps, 2G – Up to 236.8 kbps	
SIM switch	2 SIM cards, auto-switch cases: weak signal, data limit, SMS limit, roaming, no network, network denied, data connection fail SIM idle protection	
Status	Signal strength (RSSI), SINR, RSRP, RSRQ, EC/IO, RSCP, Bytes sent/received, connected band, IMSI, ICCID	
SMS	SMS status, SMS configuration, send/read SMS via HTTP POST/GET, EMAIL to SMS, SMS to EMAIL, SMS to HTTP, SMS to SMS, scheduled SMS, SMS autoreply, SMPP	
Black/White list	Operator black/white list	
Band management	Band lock, Used band status display	
APN	Auto APN	
Bridge	Direct connection (bridge) between mobile ISP and device on LAN	
Passthrough	Router assigns its mobile WAN IP address to another device on LAN	
Multiple PDN (optional)	Possibility to use different PDNs for multiple network access and services (not available in standard FW)	

#### WIRELESS

Wireless mode	IEEE 802.11b/g/n, Access Point (AP), Station (STA)	
WiFi security	WPA2-Enterprise - PEAP, WPA2-PSK, WEP, WPA-EAP, WPA-PSK; AES-CCMP, TKIP, Auto Cipher modes, client separation	
SSID	SSID stealth mode and access control based on MAC address	
WiFi users	Up to 100 simultaneous connections	
Wireless Hotspot	Captive portal (Hotspot), internal/external Radius server, built in customizable landing page	

#### **NETWORK**

TCP, UDP, IPv4, IPv6, ICMP, NTP, DNS, HTTP, HTTPS, FTP, SMTP, SSL v3, TLS, ARP, VRRP, PPP, PPPoE, UPNP, SSH, DHCP, Telnet, SMPP, SMNP, MQTT, Wake On Lan (WOL)  H.323 and SIP-alg protocol NAT helpers, allowing proper routing of VoIP packets  Ping Reboot, Wget Reboot, Periodic Reboot, LCP and ICMP for link inspection	
Ping Reboot, Wget Reboot, Periodic Reboot, LCP and ICMP for link inspection	
Dort forward traffic rules gustom rules	
Port forward, traffic rules, custom rules	
Static and dynamic IP allocation, DHCP Relay, Relayd	
Traffic priority queuing by source/destination, service, protocol or port, WMM, 802.11e	
Supported >25 service providers, others can be configured manually	
VRRP, Mobile, Wired and WiFi WAN options, each of which can be used as backup, using automatic Failover	
Balance your internet traffic over multiple WAN connections	
Possibility to mount remote file system via SSH protocol (not available in standard FW)	

#### **SECURITY**

Authentication	Pre-shared key, digital certificates, X.509 certificates	
Firewall	Pre-configured firewall rules can be enabled via web-ui, unlimited firewall configuration via CLI; DMZ; NAT; NAT-T	
Attack prevention	DDOS prevention (SYN flood protection, SSH attack prevention, HTTP/HTTPS attack prevention), port scan prevention (SYN-FIN, SYN-RST, X-mas, NULL flags, FIN scan attacks)	
VLAN	Port and tag based VLAN separation	
Mobile quota control	Set up custom data limits for both SIM cards	
WEB filter	Blacklist for blocking out unwanted websites, whitelist for specifying allowed sites only	
Access control	Flexible access control of TCP, UDP, ICMP packets, MAC address filter	
Secure Boot	Cryptographic integrity check of the each system boot process (available on device with special order code RUT950U072C0).	



ΤН			

WAN	1 x WAN port (can be configured to LAN) 10/100 Mbps, compliance IEEE 802.3, IEEE 802.3u standards, supports auto MDI/MDIX
LAN	3 x LAN ports, 10/100 Mbps, compliance IEEE 802.3, IEEE 802.3u standards, supports auto MDI/MDIX

#### VPN

OpenVPN	Multiple clients and server can be running simultaneously, 12 encryption methods		
OpenVPN Encryption	DES-CBC, RC2-CBC, DES-EDE-CBC, DES-EDE3-CBC, DESX-CBC, BF-CBC, RC2-40-CBC, CAST5-CBC, RC2-64-CBC, AES-128-CBC, AES-192-CBC, AES-256-CBC		
IPsec	IKEv1, IKEv2, supports up to 4 x VPN IPsec tunnels (instances), with 5 encryption methods (DES, 3DES, AES128, AES192, AES256)		
GRE	GRE tunnel		
PPTP, L2TP	Client/Server services can run simultaneously		
Stunnel	Proxy designed to add TLS encryption functionality to existing clients and servers without any changes in the programs' code		
DMVPN	Method of building scalable IPsec VPNs		
SSTP	SSTP client instance support		
ZeroTier	ZeroTier VPN		
WireGuard	WireGuard VPN client and server support		

#### **MODBUS TCP SLAVE**

ID range	Respond to one ID in range [1;255] or any	
Allow Remote Access	Allow access through WAN	
Custom registers	MODBUS TCP custom register block requests, which read/write to a file inside the router, and can be used to extend MODBUS TCP Slave functionality	

#### MODBUS TCP MASTER

Supported functions	01, 02, 03, 04, 05, 06, 15, 16	
Supported data formats	8 bit: INT, UINT; 16 bit: INT, UINT (MSB or LSB first); 32 bit: float, INT, UINT (ABCD (big-endian), DCBA (little-endian), CDAB, BADC)	

#### MODBUS DATA TO SERVER

Protocol	HTTP(S), MQTT, Azure MQTT		
----------	---------------------------	--	--

#### **MQTT GATEWAY**

MQ11 gateway	Allows sending commands and receiving data from MODBUS Master through MQTT broker		

# DNP3

Supported modes TCP Master, DNP3 Outstation

#### MONITORING & MANAGEMENT

og, system log, kernel log		
Firmware update from server, automatic notification		
SSH (v1, v2)		
OpenACS, EasyCwmp, ACSLite, tGem, LibreACS, GenieACS, FreeACS, LibCWMP, Friendly tech, AVSystem		



#### **IOT PLATFORMS**

Clouds of things	Allows monitoring of: Device data, Mobile data, Network info, Availability  Allows monitoring of: WAN Type, WAN IP Mobile Operator Name, Mobile Signal Strength, Mobile Network Type	
ThingWorx		
Cumulocity  Allows monitoring of: Device Model, Revision and Serial Number, Mobile Cell ID, ICCID, IMEI, Connection Type, Op Strength, WAN Type and IP		
Can send device IP, Number of bytes send/received/ 3G connection state, Network link state, IMEI, ICCID, Model Azure IoT Hub Serial, Revision, IMSI, Sim State, PIN state, GSM signal, WCDMA RSCP WCDMA EC/IO, LTE RSRP, LTE SINR, LTE RSI Operator, Operator number, Connection type, Temperature, PIN count to Azure IoT Hub server		

#### SYSTEM CHARACTERISTICS

CPU	Mediatek, MT7628, 580 MHz
RAM	128 MB, DDR2
FLASH storage	16 MB, SPI Flash

#### FIRMWARE / CONFIGURATION

WEB UI	Update FW from file, check FW on server, configuration profiles, configuration backup, restore point	
FOTA	Update FW/configuration from server	
RMS	Update FW/configuration for multiple devices	
Keep settings	Update FW without losing current configuration	

#### FIRMWARE CUSTOMIZATION

Operating system	RutOS (OpenWrt based Linux OS)
Supported languages	Busybox shell, Lua, C, C++
Development tools	SDK package with build environment provided

#### INPUT/OUTPUT

Input	1 x Digital input, 0 - 5 V detected as logic low, 8 - 30 V detected as logic high	
Output	1 x Digital open collector output, max output 30 V, 300 mA	
Events	SMS, EMAIL, RMS	

#### **POWER**

Connector	4 pin industrial DC power socket	
Input voltage range	9 – 30 VDC, reverse polarity protection; surge protection >31VDC 10us max	
PoE (passive)	Passive PoE over spare pairs. Possibility to power up through LAN port, not compatible with IEEE802.3af, 802.3at and 802.3bt standards	
Power consumption	< 2 W idle, < 7 W Max	

#### PHYSICAL INTERFACES (PORTS, LEDS, ANTENNAS, BUTTONS, SIM)

Ethernet	4 x RJ45 ports, 10/100 Mbps		
I/O's	1 x Digital Input, 1 x Digital Output on 4 pin power connector (available from HW revision 1600)		
Status LEDs	1 x bi-color connection status LED, 5 x connection strength LEDs, 4 x LAN status LEDs, 1 x Power LED		
SIM	2 x SIM slots (Mini SIM - 2FF), 1.8 V/3 V, external SIM holders, eSIM (Optional)		
Power	1 x 4 pin power connector		
Antennas	2 x SMA for LTE, 2 x RP-SMA for WiFi antenna connectors		
Reset	Reboot/User default reset/Factory reset button		



#### PHYSICAL SPECIFICATION

Casing material	Aluminium housing, plastic panels		
Dimensions (W x H x D)	110 x 50 x 100 mm		
Weight	287 g		
Mounting options	DIN rail (can be mounted on two sides), flat surface placement		

#### **OPERATING ENVIRONMENT**

Operating temperature	-40 °C to 75 °C
Operating humidity	10% to 90% non-condensing
Ingress Protection Rating	IP30

#### **REGULATORY & TYPE APPROVALS**

Regulatory	CE/RED, UKCA, CB	
	CE. (LES) O. (C. 1) CE	

#### **EMI IMMUNITY**

Standards	EN 301 489-1 V2.2.3, EN 301 489-17 V3.2.4, Final draft EN 301 489-52 V1.2.0, EN 55032:2015+A1:2020, EN 55035:2017+A11:2020, EN 61000-3-3:2013+A1:2019, EN IEC 61000-3-2:2019	
ESD	EN 61000-4-2:2009	
RS	EN 61000-4-3:2020	
EFT	EN 61000-4-4:2012	
Surge Immunity (AC Mains Power Port)	EN 61000-4-5:2014+A1:2017	
CS	EN 61000-4-6:2014	
DIP	EN IEC 61000-4-11:2020	

#### RF

Standards	EN 300 328 V2.2.2, EN 301 908-1 V13.1.1, EN 301 908-2 V13.1.1, EN 301 908-13 V13.1.1	
-----------	--	--


#### **SAFETY**

-1:2020+A11:2020
------------------



## HARDWARE INSTALLATION

- 1. Push the SIM holder button with the SIM needle.
- 2. Pull out the SIM holder.
- 3. Insert your SIM card into the SIM holder.
- 4. Slide the SIM holder back into the router.
- Attach all antennas.
- 6. Connect the power adapter to the socket on the front of the device. Then plug the other end of the power adapter into a power outlet.
- 7. Connect to the device wirelessly using SSID and password provided on the device information label or use an Ethernet cable connected to LAN port.

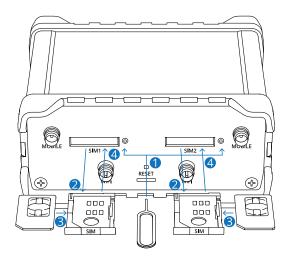

#### **LOGIN TO DEVICE**

- 1. To enter the router's Web interface (WebUI), type http://192.168.1.1 into the URL field of your Internet browser.
- 2. Use login information shown in image A when prompted for authentication.
- 3. After you log in, you will be prompted to change your password for security reasons. The new password must contain at least 8 characters, including at least one uppercase letter, one lowercase letter, and one digit. This step is mandatory, and you will not be able to interact with the router's WebUI before you change the password.
- 4. When you change the router's password, the Configuration Wizard will start. The Configuration Wizard is a tool used to set up some of the router's main operating parameters.
- 5. Go to the Overview page and pay attention to the Signal Strength indication (image B). To maximize the cellular performance try adjusting the antennas or changing the location of your device to achieve the best signal conditions.





#### **TECHNICAL INFORMATION**

Radio specifications		
RF technologies	2G, 3G, 4G, WiFi	
Max RF power	33 dBm@GSM, 24 dBm@WCDMA, 23 dBm@LTE, 20 dBm@ WiFi	
Bundled accessories specifications*		
Power adapter	Input: 0.45 A@100-240 VAC, Output: 9 VDC, 1 A, 4-pin plug	
Mobile antenna	698~960/1710~2690 MHz, 50 Ω, VSWR<3, gain*** 4 dBi, omnidirectional, SMA male connector	
WiFi antenna	2400~2483.5 MHz, 50 Ω, VSWR<2, gain*** 5 dBi, omnidirectional, RP-SMA male connector	

<sup>\*</sup>Order code dependent.
\*\*Higher gain antenna can be connected to compensate for cable attenuation when a cable is used. The user is responsible for the compliance with the legal regulations.




# WHAT'S IN THE BOX?

#### STANDARD PACKAGE CONTAINS\*

- Router RUT951
- 9 W PSU
- 2 x LTE antennas (swivel, SMA male)
- 2 x WiFi antennas (swivel, RP-SMA male)
- SIM Adapter kit
- Ethernet cable (1.5 m)
- RMS Flyer
- QSG (Quick Start Guide)
- Packaging box



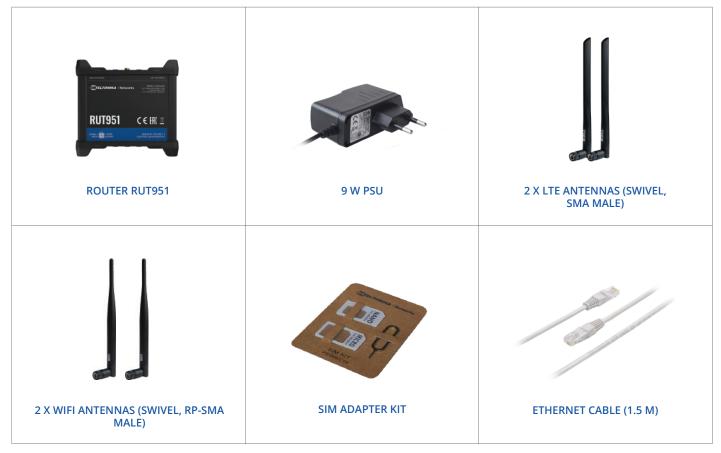

<sup>\*</sup> For all standard order codes standard package contents are the same, execpt for PSU.



# **STANDARD ORDER CODES**

PRODUCT CODE	HS CODE	HTS CODE	PACKAGE CONTAINS
RUT951 100000	851762	8517.62.00	Standard package with Euro PSU
RUT951 000000	851762	8517.62.00	Standard package with Euro PSU

For more information on all available packaging options – please contact us directly.

# **AVAILABLE VERSIONS**

PRODUCT CODE	REGION (OPERATOR)	FREQUENCY
RUT950 1*****	Europe, the Middle East, Africa	<ul> <li>4G (LTE-FDD): B1, B3, B5, B7, B8, B20</li> <li>4G (LTE-TDD): B40</li> <li>3G: B1, B5, B8</li> <li>2G: B3, B8</li> </ul>
RUT951 0****	Europe, the Middle East, Africa, Korea, Thailand	<ul> <li>4G (LTE-FDD): B1, B3, B7, B8, B20, B28A</li> <li>4G (LTE-TDD): B38, B40, B41</li> <li>3G: B1, B8</li> <li>2G: B3, B8</li> </ul>

The price and lead-times for region (operator) specific versions may vary. For more information please contact us.

<sup>1 -</sup> Router is not certified on Bell, T-Mobile network.



## **MOUNTING OPTIONS**

## **DIN RAIL KIT**

Parameter	Value
Mounting standard	35mm DIN Rail
Material	Low carbon steel
Weight	57g
Screws included	Philips Pan Head screw #6-32×3/16, 2pcs
Dimensions	82 mm x 46 mm x 20 mm
RoHS Compliant	V

#### **DIN RAIL KIT**

- DIN Rail adapter
- Philips Pan Head screw #6-32×3/16, 2pcs for RUT2xx/RUT9xx



ORDER CODE	HS CODE	HTS CODE
PR5MEC00	73269098	7326.90.98

For more information on all available packaging options – please contact us directly.

## **COMPACT DIN RAIL KIT**

Parameter	Value
Mounting standard	35mm DIN Rail
Material	ABS + PC plastic
Weight	6.5 g
Screws included	Philips Pan Head screw #6-32×3/16, 2pcs
Dimensions	70 mm x 25 mm x 14,5 mm
RoHS Compliant	V

#### DIN RAIL KIT

- Compact plastic DIN Rail adapter (70x25x14,5mm)
- Philips Pan Head screw #6-32×3/16, 2pcs

ORDER CODE	HS CODE	HTS CODE
PR5MEC11	73269098	7326.90.98

For more information on all available packaging options – please contact us directly.

## **SURFACE MOUNTING KIT**

Parameter	Value
Mounting standard	Flat surface mount
Material	ABS + PC plastic
Weight	2x5 g
Screws included	Philips Pan Head screw #6-32×3/16, 2pcs
Dimensions	25 mm x 48 mm x 7.5 mm
RoHS Compliant	V

#### **DIN RAIL KIT**

- Surface mounting kit
- Philips Pan Head screw #6-32×3/16, 2pcs

ORDER CODE	HS CODE	HTS CODE
PR5MEC12	73269098	7326.90.98

For more information on all available packaging options – please contact us directly.





## **RUT951 SPATIAL MEASUREMENTS & WEIGHT**

#### MAIN MEASUREMENTS


W x H x D dimensions for RUT951:

Device housing\*:  $110 \times 50 \times 100$ Box:  $355 \times 60 \times 175$ 

\*Housing measurements are presented without antenna connectors and screws; for measurements of other device elements look to the sections below.


#### **TOP VIEW**

The figure below depicts the measurements of RUT951 and its components as seen from the top:

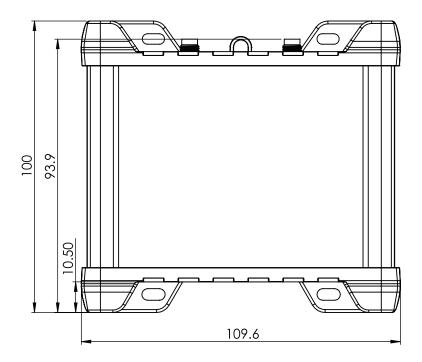

#### **RIGHT VIEW**


The figure below depicts the measurements of RUT951 and its components as seen from the right side:  $\frac{1}{2} \left( \frac{1}{2} \right) = \frac{1}{2} \left( \frac{1}{2} \right) \left( \frac{1}$ 

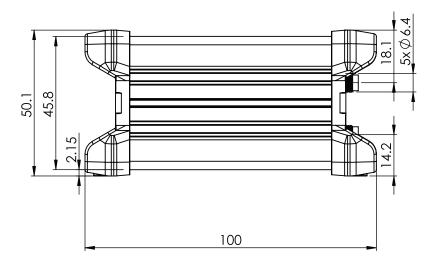




#### **FRONT VIEW**

The figure below depicts the measurements of RUT951 and its components as seen from the front panel side:

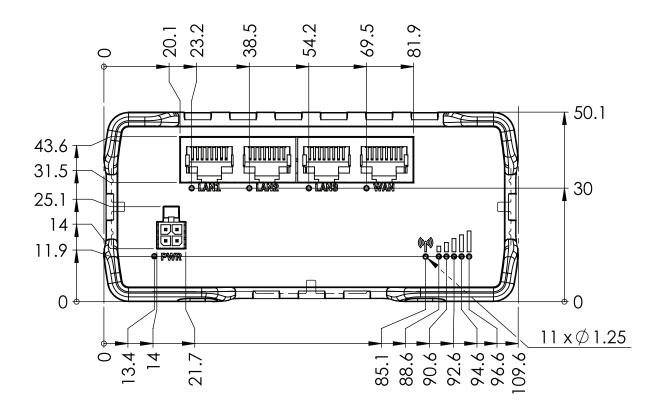

#### **REAR VIEW**


The figure below depicts the measurements of RUT951 and its components as seen from the back panel side:  $\frac{1}{2} \left( \frac{1}{2} \right) = \frac{1}{2} \left( \frac{1}{2} \right) \left($ 

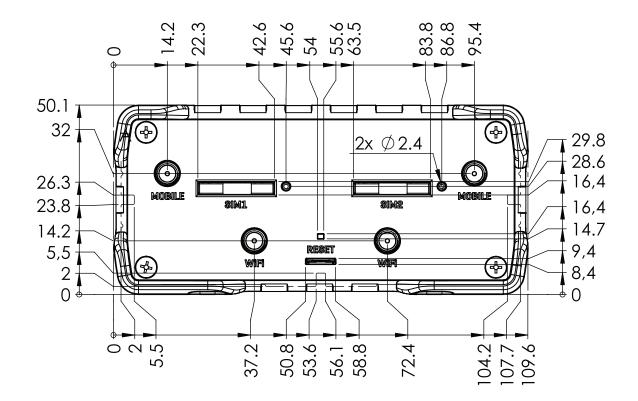



#### MOUNTING SPACE REQUIREMENTS

The figure below depicts an approximation of the device's dimensions when cables and antennas are attached:

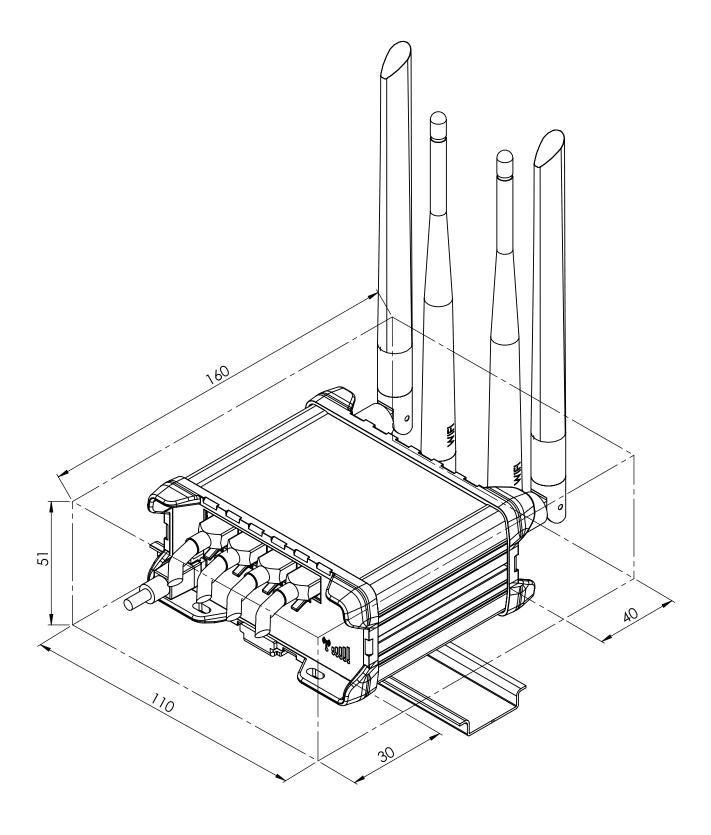



#### **DIN RAIL**

The scheme below depicts protrusion measurements of an attached DIN Rail:

