


Installation Guide

AX3000 Gigabit VPN Gateway

Note: The image may differ from the actual product.
© 2024 TP-Link 7106511236 REV1.20.0


1. Remove the adhesive backing papers from the rubber feet.
2. Turnover the device and attach the supplied rubber feet to the recessed areas on the bottom at each corner of the device.
3. Place the device on a flat table.

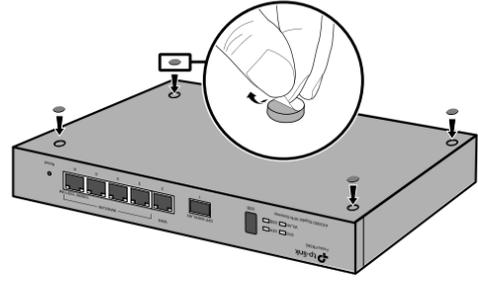

Note:
This device also supports wall-mounting installation. For detailed information, please refer to the Wall Mounting Guide on the product's support page.


1 Hardware Overview

Front Panel

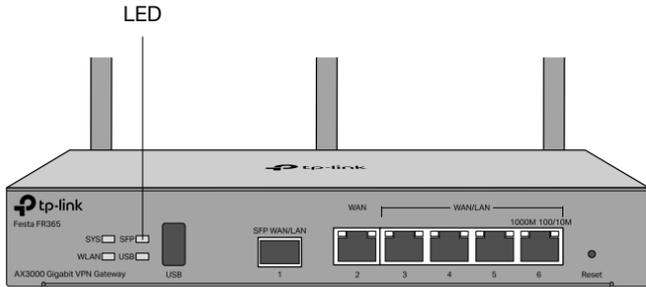

- **Reset:** Press and hold the button for 5 seconds, the SYS LED will flash quickly, indicating the device is being reset to its factory default settings.

Back Panel

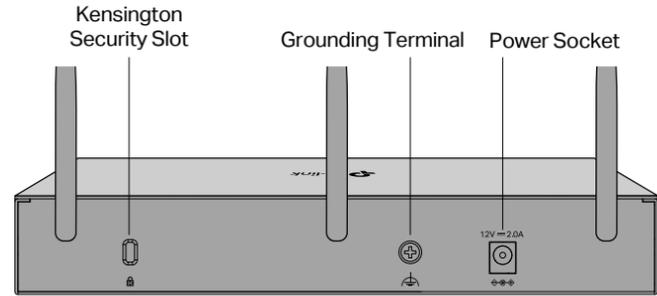


Interface	Description
USB	USB 3.0 for USB modem and USB storage device.
SFP WAN/LAN	Gigabit SFP WAN/LAN port connecting to an SFP module. By default, it is a WAN port. You can configure it to a LAN port on the management page.
WAN	Gigabit RJ45 WAN port.
WAN/LAN (Ports 3-6)	Gigabit RJ45 WAN/LAN ports. By default, they are LAN ports connecting to local PCs or switches. You can configure each port to a WAN port on the management page.
Kensington Security Slot	Secure the lock (not provided) into the security slot to prevent the device from being stolen.
Grounding Terminal	The gateway already comes with lightning protection mechanism. For detailed lightning protection measures, refer to the Lightning Protection Guide: https://www.tp-link.com/us/configuration-guides/lightning_protection_guide/ .
Power Socket	Connect to the power outlet via the provided power adapter.

LED	Indication
SYS	Slow Flashing: System is running normally. Quick Flashing: The gateway is being reset. On/Off: System is starting up or running abnormally.
WLAN	On: Wireless networking is enabled. Off: Wireless networking is disabled.
SFP	On: Running at 1000 Mbps, but no activity. Off: No device is linked to the corresponding port. Flashing: Running at 1000 Mbps, and transmitting or receiving data.
USB	For USB Modem: Flashing: A modem is connected, and it is initializing. On: The modem is loaded. Off: No modem is inserted, or it is corrupted or incompatible. For USB Storage: On: A USB storage device is inserted and identified. Off: No USB storage device is inserted, or it is corrupted or incompatible.
Link/Act	Green On: Running at 1000 Mbps, but no activity. Green Flashing: Running at 1000 Mbps, and transmitting or receiving data. Green Off: Not running at 1000 Mbps, or no device is connected to the corresponding port. Yellow On: Running at 100/10 Mbps, but no activity. Yellow Flashing: Running at 100/10 Mbps, and transmitting or receiving data. Yellow Off: Not running at 100/10 Mbps, or no device is connected to the corresponding port.

2 Hardware Connection

1. Attach the antennas.

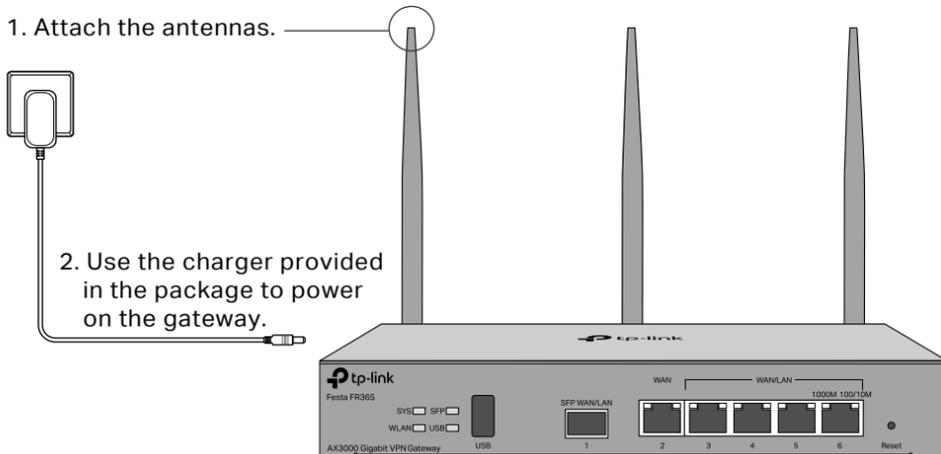


2. Use the charger provided in the package to power on the gateway.

4. Wait until the SYS LED flashes slowly and the WLAN LED turns solid, indicating the gateway is ready for setup.

SYS Slow Flashing WLAN Solid On


3. Connect the gateway via Ethernet.

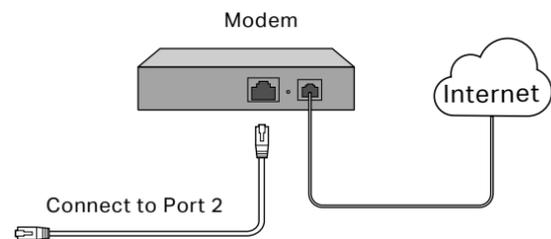

Note: To connect to the internet via another RJ45 WAN port (ports 3-6), configure your desired port to WAN, then connect the port to the internet via an RJ45 cable. Refer to FAQ-Q1 for more details.


Or

3. Connect the gateway via fiber network.

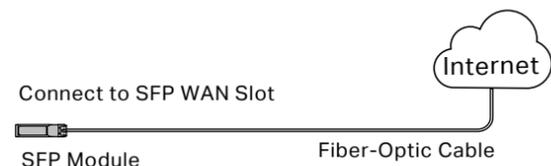

3 Software Configuration

Step 1: Connect to Internet

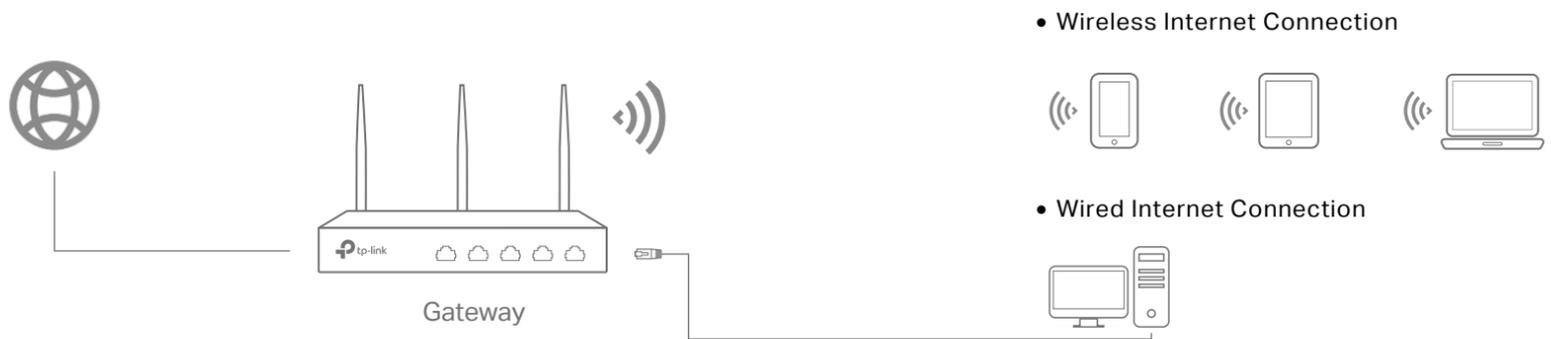

1. Connect your device to the gateway (wired or wireless).

Note: If your computer is configured with a fixed IP, change it to **Obtain an IP address automatically**.

Wired

Turn off the Wi-Fi on your computer and connect to a LAN port of the gateway with an RJ45 cable.

Wireless

a. Find the SSID (network name) printed on the label at the bottom of the gateway.

b. Click the network icon of your computer or go to Wi-Fi settings of your smart device, and then select the SSID to join the network.

2. Log in to the gateway.

a. Launch a web browser, and enter <http://tplinker.net> or <http://192.168.0.1> in the address bar.

b. Create a username and a password for subsequent login attempts and for security.


c. Use the username and password set above to log in to the webpage.

3. After a successful login, follow the web instructions to configure the internet settings, and you can configure limited functions by clicking the menu of the screen.

Note: To easily manage the network and configure more settings, please proceed to Step 2 to adopt the gateway via the Festa Cloud-Based Controller.

Step 2: Configure the Gateway via the Festa Cloud-Based Controller

After the gateway is connected to the internet, you can configure and manage the gateway via the Festa Cloud-Based Controller.

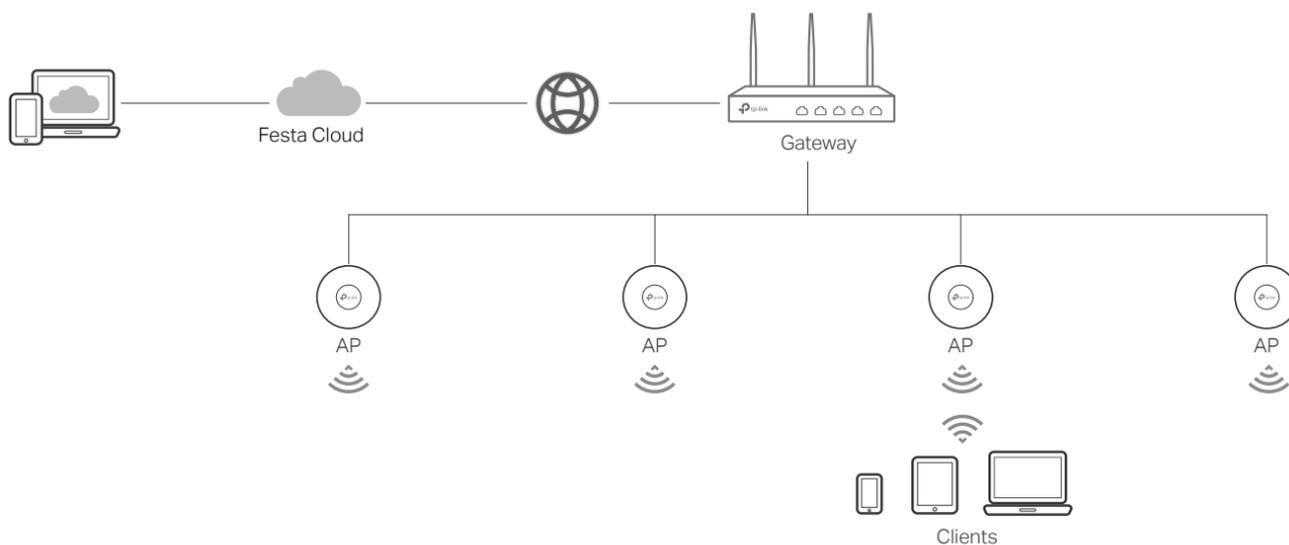

Option 1: Via a Web Browser

1. Make sure that your management device can access the internet.

2. Launch a web browser and enter <https://festa.tplinkcloud.com> in the address bar. Log in with your TP-Link ID.

<https://festa.tplinkcloud.com>

3. Click **+ Add Controller**, then you will see you have successfully registered for a Cloud-Based Controller and the controller has been added to the controller list.

4. Click **Set Up Now**, click **Config New Setup** and follow the step-by-step instructions to complete the configuration wizard of the controller.

5. On the controller's management page, go to **Devices**, and click **+ Add Devices** and follow the step-by-step instructions to adopt the gateway.

Now you can configure and manage the gateway on the controller.

Option 2: Via Festa App

1. Download and install the Festa App from App Store or Google Play.



2. Launch the Festa App and log in with your TP-Link ID.

3. Tap **+** on the upper right corner, then you will see you have successfully registered for a Cloud-Based Controller and the controller has been added to the controller list.

4. Tap **Confirm**, tap **Let's Get Started** and follow the step-by-step instructions to complete the configuration wizard of the controller.

5. On the controller's management page, go to **Devices**, and click **+** on the upper right corner, and follow the step-by-step instructions to adopt the gateway.

Now you can configure and manage the gateway via the Festa App.

For detailed configurations, refer to the User Guide of the controller. The guide can be found on the download center of our official website: <https://www.tp-link.com/support/download/?type=smb>.

Frequently Asked Questions (FAQ)

Q1. What should I do if I want to change the mode of the WAN/LAN ports?

Follow the steps:

- (Recommended) Refer to the Interface Description table of this guide for the default mode of the WAN/LAN ports.
- Connect a computer to a LAN port of this gateway. If your computer is configured with a fixed IP address, change it to **Obtain an IP address automatically**.
- Log in to this gateway's management page at <http://192.168.0.1>. Go to **Network > WAN > WAN Mode**, change the mode of the WAN/LAN ports by ticking the checkboxes, and click **Save**.

Q2. What should I do if I need to connect this gateway to a modem gateway?

Check the LAN IP address of the modem gateway first. If the LAN IP address of the modem gateway is 192.168.0.1, which is the same as the default LAN IP address of this gateway, follow the steps to change the LAN IP address of this gateway:

- Connect a computer to a LAN port of this gateway. If your computer is configured with a fixed IP address, change it to **Obtain an IP address automatically**.
- Log in to this gateway's management page at <http://192.168.0.1>, and go to **Network > LAN > LAN**. In the **Network List** section, change the IP address 192.168.0.1 to 192.168.1.1, and click **OK**.

Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- Do not use the device where wireless devices are not allowed.
- Do not use damaged charger or USB cable to charge the device.
- Do not use any other chargers than those recommended.
- Adapter shall be installed near the equipment and shall be easily accessible.
- Place the device with its bottom surface downward.

EU Declaration of Conformity

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/53/EU, 2009/125/EC, 2011/65/EU and (EU) 2015/863.

The original EU declaration of conformity may be found at <https://www.tp-link.com/en/support/ce/>.

UK Declaration of Conformity

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Regulations 2017.

The original UK declaration of conformity may be found at <https://www.tp-link.com/support/ukca/>.

For technical support, the user guide and other information, please visit <https://www.tp-link.com/support/?type=smb>.

