


WI-PCES509GF

1. Packing Content


- WI-PCES509GF

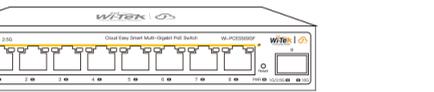

Switch x 1



Power Adapter x 1

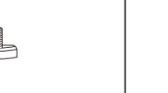

Magnetic Accessory x 4



Quick Installation Guide x 1

2. Hardware Overview

For WI-PCES509GF

• Front Panel



LED Indicator

1*1000M/2.5G/10Gbps SFP Slot

Reset Button

8*10M/100M/1000M/2.5Gbps PoE+ Ports

• Back Panel



Grounding

DC 55V IN

• LED Indicator and Button

| LED Indicator&Button | Description |
|-----------------------|--|
| PWR | On: The switch is powered on Off: The switch is powered off or power supply is abnormal |
| PoE | On: PoE enabled Off: PoE disabled |
| Port 1-8 | Green on: Port is connected at 2.5Gbps rate Orange on: Port is connected at 10/100/1000Mbps rate Blinking: Data transmission Off: Port disconnected |
| SFP Indicator(Port 9) | 1Gbps/2.5Gbps On: Port is connected at 1G/2.5Gbps rate Off: Port disconnected or the port is not connected at 1Gbps/2.5Gbps 10Gbps On: Port is connected at 10Gbps rate Off: Port disconnected or the port is not connected at 10Gbps |
| Reset | Hold for >5 sec. to restore factory default |


3. Installation

• 3.1 Desktop Installation




• 3.2 Wall-mount Installation

Install the Switch by following the steps: Fix 2 screws on the wall to align the 2 fixing holes on the Switch, as shown in the figure below, and hang the Switch smoothly on the screws.

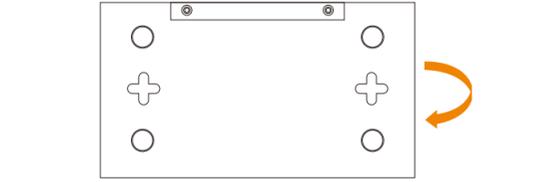

• Step2. Fix 2 screws on the wall. Leave the screws at least 1.5mm outside the wall to ensure that the switch can be firmly hung on the screws.

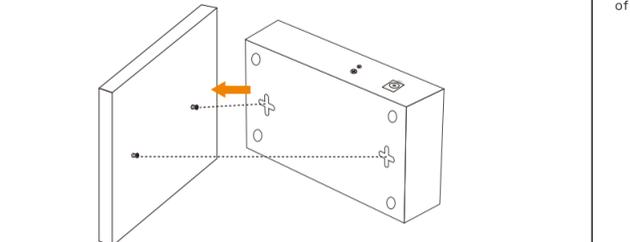

• Step3. Fasten the switch to the screws through the two installation holes at the bottom of the switch. Place the switch ports side down, and the two sides of the switch are perpendicular to the ground.



• 3.3 Magnetic-mount Installation

The switch can be installed in magnetic mode, and devices can be attached to iron desktops or walls.

Step 1. Insert the countersunk screw through the center round hole of the permanent magnet using a Phillips screwdriver and secure it to the blind hole nut at the bottom of the switch.



Step1. Use a marker to mark the location of mounting holes on the wall. The two mounting holes should be in the same horizontal line. The spacing between the screws matching the spacing between the two fixing holes of the switch.



Step1. Insert the countersunk screw through the center round hole of the permanent magnet using a Phillips screwdriver and secure it to the blind hole nut at the bottom of the switch.



Step2. Attach the switch installed with magnetic absorption accessories to a suitable installation position.




Step1. Log in to the switch locally

Let the Switch obtain an IP address and then check the DHCP server to see which IP address was assigned. The Switch is set to DHCP by default, so it will try to obtain an IP address automatically. If that fails, then it will use the default fallback IP address, 192.168.0.1




To log in, follow these steps:

1. Launch your web browser. Enter the corresponding IP address of the switch in the address bar.
2. The login screen will appear. The default username and password are both admin

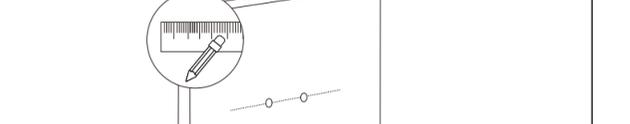


1. Log in to the cloud management page

(No account, you need to register an account to log in, The URL is <http://cloud2.wireless-tek.com>)


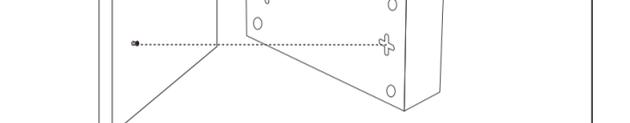


2. Enter the cloud binding switch

(Explain: The switch must be connected to the internet to bind successfully)


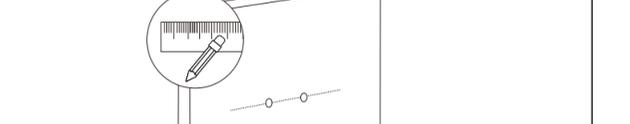


Please enter the device serial number and the last six hexes of the device MAC address to bind a device to the current group, device can be off when binding. (Explain: The 17-digit SN code and MAC address of the switch are shown on the sticker on the back of the switch as shown in the figure below)

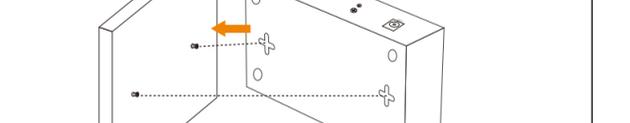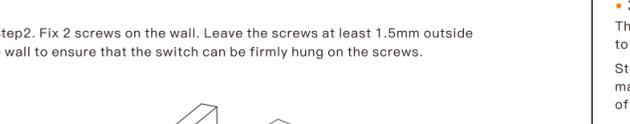

3. After binding, you can use the Switch in the Tunnel option in the cloud management, and then use EWEB to enter the switch.

(The EWEB tunnel can be created only when the easy smart switch is linked with the other type of Wi-Tek cloud management device, such as cloud L2, L3 management switch, gateway, wireless AP, etc.)

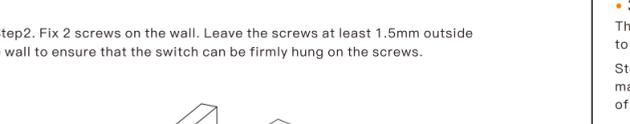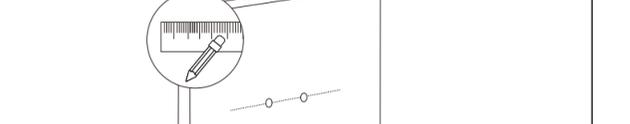

Warranty Card

| | |
|-------------------|--|
| Username | |
| Address | |
| Telephone No. | |
| Purchase Shop | |
| Purchase Address | |
| Product Model No. | |
| Purchase Time | |
| Serial No. | |
| Dealer Signature | |

- If the product defects within the warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Wireless-Tek Technology Limited
 Address: Building 3, Units 1801-1807, 1812, Huaqiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.
 Website: www.wireless-tek.com
 Tel: 86-0755-32811290
 Email: sales@wireless-tek.com
 Technical Support: tech@wireless-tek.com

